


SETUP

Press back on battery cover tab then pull down to open

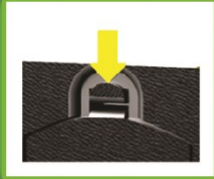

Insert 9v battery which supports high current electronics

Set the power switch to on and place device before calibration phase

PRO TIP

Consider placing in doorways to capture any anomalies entering or exiting the room

SCIRETECH.CO.UK

Discover everything you need on the SCIRE website to access cutting-edge, science based devices




EXCLUSIVE CODE


At checkout enter the single use discount code SCIRETECH

SCIRE

SCIRETECH.CO.UK

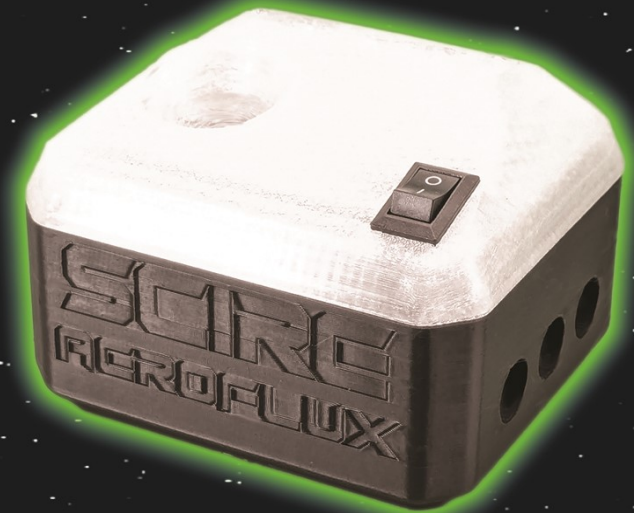

AEROFLUX II v2.3
contact@sciretech.co.uk

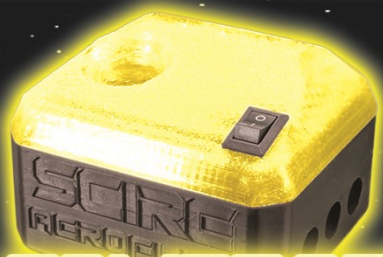

CALIBRATION

On startup, the device flashes yellow, place it down before calibration begins. Whilst solid yellow it is calibrating to air pressure and natural changes. Any movement may prevent it from detecting fluctuation patterns.



MONITORING

When glowing green, the AeroFlux captures 160 readings per second and analyses them through an algorithm built from real-world data recorded during documented paranormal events.

ALERTS



MINOR FLUCTUATION

The AeroFlux has detected an anomalous fluctuation pattern! Pay close attention as you may witness small EMF spikes, audible taps, changes in temperature or other minor phenonoma.



MAJOR FLUCTUATION

It has detected a rare major event! Watch out for loud unexplained noises, visual anomalies, Strong EMF spikes, object manipulation. Anything could be happening!